
PALMERINDUSTRIES CUSTOM ARCHITECTURAL METALWORK 71 Cypress Street Warwick • RI 02888 Palmerindustries.com 401-421-1730

2-Piece Flange

FLANGE ASSEMBLY & INSTALLATION INSTRUCTIONS

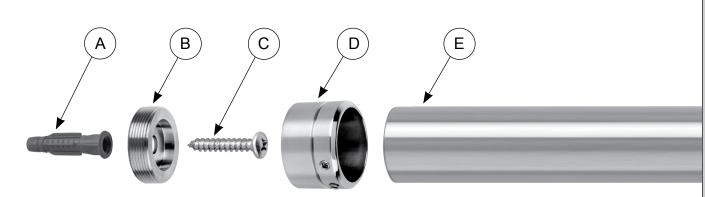

1. Locate and attach Threaded Plug (B) to surface using Plastic Anchor (A) and Structural Screw (C).



2. Slide Threaded Flange (D) over Tube (E) and position in alignment with Threaded Plug (B).



3. Screw Threaded Flange (D) onto Threaded Plug (B) flush to surface - If necessary re-position rotation of Threaded Plug (B) so that set screws are positioned to be best hidden when the flange is tight to the mounting surface.



- 4. Tighten both set screws using the provided Hex Wrench.
 - A. Plastic Anchor
 - B. Threaded Plug
 - C. Structural Screw

- D. Threaded Flange
- E. Tube